

Compatible USB Device List for PSR-SX600 (As of Dec. 2021)

Yamaha have tested the devices listed below and believe them to work correctly with this instrument. Please note that these devices might be updated and new versions released which may stop them from working correctly with this product.

For more information on these devices including availability, please consult the device manufacturer.

USB Flash Memory			
<i>Capacity</i>	<i>Manufacturer</i>	<i>Model</i>	<i>Note</i>
16GB	integral	INFD16GBMIC-OTG	
32GB	integral	INFD32GBNEONPK	
8GB	integral	INFD8GBBLK.	
16GB	Intenso	3531470	
32GB	Kingston	DT20/32GB	Discontinued model
32GB	Kingston	DTDE/32GB	
32GB	Kingston	DTDUO3G2/32GB	
32GB	Kingston	DTKN/32GB	
32GB	Kingston	DTX/32GB	
32GB	LEXAR	LJDM45-32GABSL	
32GB	LEXAR	LJDS47-32GABBK	
32GB	LEXAR	LJDV40-32GABVNA	
16GB	PATRIOT	PSF16GPSHB32U	
32GB	PATRIOT	PSF32GPSHB32U	
32GB	SanDisk	SDDD3-032G-G46	
32GB	TOSHIBA	THN-U203W0320E4, THN-U203W0320A4	
32GB	TOSHIBA	THN-U382W0320E4	Discontinued model
16GB	Transcend	TS16GJF720S	
32GB	Transcend	TS32GJF700	
32GB	Transcend	TS32GJF710S	
32GB	transcend	TS32GJF760	
32GB	transcend	TS32GJF780	
32GB	transcend	TS32GJF790K	
32GB	transcend	TS32GJF890S	
8GB	Transcend	TS8GJF720S	