

YDP-S52 Quick Operation Guide

While holding down the [DEMO/SONG] or [PIANO/VOICE] button, press one of the highlighted keys shown below to select a Demo Song or set a parameter. (Refer to Diagrams 1 and 2 below.)

1

Quick Play **Demo Songs** **50 Preset Songs (50 Greats for the Piano)** **Song Data Loaded from the Computer**

Quick Play				Demo Songs				50 Preset Songs (50 Greats for the Piano)												Song Data Loaded from the Computer																																																			
A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6																																				
Off						Grand Piano 1	Grand Piano 2	E.Piano 1	Harpischord	Pipe Organ	Strings	Song No. 1	Song No. 2	Song No. 3	Song No. 4	Song No. 5	Song No. 6	Song No. 7	Song No. 8	Song No. 9	Song No. 10	Song No. 11	Song No. 12	Song No. 13	Song No. 14	Song No. 15	Song No. 16	Song No. 17	Song No. 18	Song No. 19	Song No. 20	Song No. 21	Song No. 22	Song No. 23	Song No. 24	Song No. 25	Song No. 26	Song No. 27	Song No. 28	Song No. 29	Song No. 30	Song No. 31	Song No. 32	Song No. 33	Song No. 34	Song No. 35	Song No. 36	Song No. 37	Song No. 38	Song No. 39	Song No. 40	Song No. 41	Song No. 42	Song No. 43	Song No. 44	Song No. 45	Song No. 46	Song No. 47	Song No. 48	Song No. 49	Song No. 50	1st Song	2nd Song	3rd Song	4th Song	5th Song	6th Song	7th Song	8th Song	9th Song	10th Song
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7																				

2

Stereophonic Optimizer

IAC Depth				Voices				Reverb Types				Dampner Resonance				Reverb Depth				Octave Shift (Dual/Duo mode)				Volume Balance (Dual/Duo mode)				Touch Sensitivity																																		
A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6																											
-3	-1	0	+2			Grand Piano 1	Grand Piano 2	E.Piano 1	Harpischord	Pipe Organ	Strings	Recital Hall	Concert Hall	Chamber	Club	Off	Off					0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	Most suitable for the selected voice	-1 (Voice 1)	0 (Voice 1)	+1 (Voice 1)	-1 (Voice 2)	0 (Voice 2)	+1 (Voice 2)	-5	-4	-3	-2	0	+2	+4	+5	+6	Fixed	Medium	Soft	Hard
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7											

3

While holding down the [PIANO/VOICE] button, simultaneously press the [+R] and [-L] buttons to turn Duo on or off.

To turn Duo on or off:

