

YPT-420

Data List

Daten-Liste

Liste des données

Lista de datos



Scores

Noten
Partitions
Partituras 2

Voice List

Voice-Liste
Liste des voix
Lista de voces 8

Drum Kit List

Drum Kit-Liste
Liste des kits de percussion
Lista de juegos de batería 14

Style List

Style-Liste
Liste des styles
Lista de estilos 16

Arpeggio List

Liste der Arpeggios
Liste des arpèges
Lista de arpeggios 17

Music Database List

Musikdatenbankliste
Liste des bases de données musicales
Lista de la base de datos musical 18

Songs Provided On the Supplied CD-ROM

Songs auf der beiliegenden CD-ROM
Morceaux disponibles sur le CD-ROM fourni
Canciones incluidas en el CD-ROM proporcionado 19

Effect Type List

Effekttypliste
Liste des types d'effets
Lista de tipos de efectos 20



Scores / Noten / Partitions / Partituras

This demo is an example of how the Easy Song Arranger can be used to change styles throughout a piece.

Song No. 9

♩ = 123

(Function Demo for Easy Song Arranger)

Hallelujah Chorus

Intro **A** D G/D D

Melody

Style Progression <Clubdance> **Main** **Fill** 1st time **Main** 2nd time <Hard Rock> **Main**

D G/D D G/D D G/D D A7 D A D/A A

5/23

Fill **Main** **Fill** **Main**

A D/A A D/A A D/A A D A/C# E7/B A **B**A A/G

9/27

Fill **Main** **Fill** **Main** <Disco Philly> <Rumba Flamenco>

D/F# Bm7 E7sus4 E7 A D/A A D/A A D/A A D/A A

13/31

Fill **Fill** **Main** **Fill** <Bluegrass>

17/35

D D/C G/B Em7 A7sus4 A7 D G/D D G/D D

Main

<Tango> Main

Fill

<Fun 4/4> Main

21/39

G/D D G/D D C^D_{8va} G/D D D G/D D

Fill

Fill

<Dream Dance> Main

42

G/D D G/D D A7 D D

(8va)

10

Fill

Ending

This score is provided with the intent that the pitch will be corrected by the performance assistant technology feature. If you play the “Play These Notes” part using the performance assistant technology feature, the part will be corrected and played so that it matches the backing part.

Song No. 10

♩ = 61

(Function Demo for performance assistant technology)

Ave Maria

Melody

Play These Notes

P.A.T. Chord Symbols

These Notes Will Sound

Turn **P.A.T.** ON
Type = CHORD

5

Your Turn.

Repeatedly Play the Same Key.

C + Dm7/C + G7/B + C

9

Am/C + D7/C + G/B + CM7/B

13

Am7 + D7 + G

This score is provided with the intent that the pitch will be corrected by the performance assistant technology feature. If you play the “Play These Notes” part using the performance assistant technology feature, the part will be corrected and played so that it matches the backing part.

Song No. 11

♩ = 108

(Function Demo for performance assistant technology)

Nocturne op.9-2

Turn **(P.A.T.)** ON
Type = CHORD
 2nd time only

Melody

Play These Notes

P.A.T. Chord Symbols

These Left-hand Notes Will Sound

9/25

You Can Even Play the Same Keys!

F + B^bm/F + F + Am/E + D7

14/30

D7 + Am^b5/G + Gm + C7 + A7/C#

19/35

Dm Bdim7 C7sus4 C7

23

1. 2.

F F F F F

42

rit.

F F F F F

● Panel Voice List / Verzeichnis der Bedienfeld-Voices / Liste des voix de panneau / Lista de voces del panel

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
PIANO				
001	000	112	001	Grand Piano
002	000	112	002	Bright Piano
003	000	112	007	Harpsichord
004	000	112	004	Honky-tonk Piano
005	000	112	003	MIDI Grand Piano
006	000	113	003	CP 80
E.PIANO				
007	000	114	005	Cool! Galaxy Electric Piano
008	000	113	006	Hyper Tines
009	000	112	005	Funky Electric Piano
010	000	112	006	DX Modern Electric Piano
011	000	114	006	Venus Electric Piano
012	000	112	008	Clavi
ORGAN				
013	000	118	019	Cool! Organ
014	000	117	019	Cool! Rotor Organ
015	000	112	017	Jazz Organ 1
016	000	113	017	Jazz Organ 2
017	000	112	019	Rock Organ
018	000	114	019	Purple Organ
019	000	112	018	Click Organ
020	000	116	017	Bright Organ
021	000	127	019	Theater Organ
022	000	121	020	16'+2' Organ
023	000	120	020	16'+4' Organ
024	000	113	020	Chapel Organ
025	000	112	020	Church Organ
026	000	112	021	Reed Organ
ACCORDION				
027	000	112	022	Musette Accordion
028	000	113	022	Traditional Accordion
029	000	113	024	Bandoneon
030	000	113	023	Modern Harp
031	000	112	023	Harmonica
GUITAR				
032	000	112	025	Classical Guitar
033	000	112	026	Folk Guitar
034	000	112	027	Jazz Guitar
035	000	117	028	60's Clean Guitar
036	000	113	026	12Strings Guitar
037	000	112	028	Clean Guitar
038	000	113	027	Octave Guitar
039	000	112	029	Muted Guitar
040	000	112	030	Overdriven Guitar
041	000	112	031	Distortion Guitar
BASS				
042	000	112	034	Finger Bass
043	000	112	033	Acoustic Bass
044	000	112	035	Pick Bass
045	000	112	036	Fretless Bass
046	000	112	037	Slap Bass
047	000	112	039	Synth Bass
048	000	113	039	Hi-Q Bass
049	000	113	040	Dance Bass
STRINGS				
050	000	112	049	String Ensemble
051	000	112	050	Chamber Strings
052	000	113	050	Slow Strings
053	000	112	045	Tremolo Strings
054	000	112	051	Synth Strings
055	000	112	046	Pizzicato Strings
056	000	112	041	Violin
057	000	112	043	Cello

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
058	000	112	044	Contrabass
059	000	112	047	Harp
060	000	112	106	Banjo
061	000	112	056	Orchestra Hit
CHOIR				
062	000	112	053	Choir
063	000	113	053	Vocal Ensemble
064	000	112	055	Air Choir
065	000	112	054	Vox Humana
SAXOPHONE				
066	000	117	067	Sweet! Tenor Sax
067	000	113	065	Sweet! Soprano Sax
068	000	112	067	Tenor Sax
069	000	112	066	Alto Sax
070	000	112	065	Soprano Sax
071	000	112	068	Baritone Sax
072	000	114	067	Breathy Tenor Sax
073	000	112	072	Clarinet
074	000	112	069	Oboe
075	000	112	070	English Horn
076	000	112	071	Bassoon
TRUMPET				
077	000	115	057	Sweet! Trumpet
078	000	112	057	Trumpet
079	000	112	058	Trombone
080	000	113	058	Trombone Section
081	000	112	060	Muted Trumpet
082	000	112	061	French Horn
083	000	112	059	Tuba
BRASS				
084	000	112	062	Brass Section
085	000	113	062	Big Band Brass
086	000	113	063	80's Brass
087	000	119	062	Mellow Horns
088	000	114	063	Techno Brass
089	000	112	063	Synth Brass
FLUTE				
090	000	114	074	Sweet! Flute
091	000	113	076	Sweet! Pan Flute
092	000	112	074	Flute
093	000	112	073	Piccolo
094	000	112	076	Pan Flute
095	000	112	075	Recorder
096	000	112	080	Ocarina
SYNTH LEAD				
097	000	112	081	Square Lead
098	000	112	082	Sawtooth Lead
099	000	115	082	Analogon
100	000	119	082	Fargo
101	000	112	099	Star Dust
102	000	112	086	Voice Lead
103	000	112	101	Brightness
SYNTH PAD				
104	000	112	092	Xenon Pad
105	000	112	095	Equinox
106	000	112	089	Fantasia
107	000	113	090	Dark Moon
108	000	113	101	Bell Pad
PERCUSSION				
109	000	112	012	Vibraphone
110	000	112	013	Marimba
111	000	112	014	Xylophone
112	000	112	115	Steel Drums
113	000	112	009	Celesta
114	000	112	011	Music Box
115	000	112	015	Tubular Bells
116	000	112	048	Timpani

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
DRUM KITS				
117	127	000	001	Standard Kit 1
118	127	000	002	Standard Kit 2
119	127	000	009	Room Kit
120	127	000	017	Rock Kit
121	127	000	025	Electronic Kit
122	127	000	026	Analog Kit
123	127	000	113	Dance Kit
124	127	000	033	Jazz Kit
125	127	000	041	Brush Kit
126	127	000	049	Symphony Kit
127	126	000	001	SFX Kit 1
128	126	000	002	SFX Kit 2
ARPEGGIO				
129	000	112	081	Synth Sequence
130	000	112	082	Sawtooth Lead Arpeggio
131	000	115	082	Analog Sequence
132	000	096	082	Chord Sequence
133	000	006	082	Sawtooth
134	000	000	081	Square Pulse
135	000	113	063	Trance
136	000	114	063	Synth Echo
137	000	112	001	Piano Arpeggio
138	000	114	005	Ballad Electric Piano
139	000	117	028	Guitar Chord
140	000	112	025	Guitar Arpeggio
141	000	113	039	Acid Synth
142	127	000	001	Arabic Loop
143	127	000	002	Massive Percussion

● XGlite Voice/XGlite Optional Voice* List / Liste der Xglite-Voces/optionale Xglite-Voces* / Voix XGlite/liste des voix* XGlite en option / Lista de voces de XGlite/voces opcionales de XGlite*

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
PIANO				
144	000	000	001	Grand Piano
145	000	001	001	Grand Piano KSP
146	000	040	001	Piano Strings
147	000	041	001	Dream
148	000	000	002	Bright Piano
149	000	001	002	Bright Piano KSP
150	000	000	003	Electric Grand Piano
151	000	001	003	Electric Grand Piano KSP
152	000	032	003	Detuned CP80
153	000	000	004	Honky-tonk Piano
154	000	001	004	Honky-tonk Piano KSP
155	000	000	005	Electric Piano 1
156	000	001	005	Electric Piano 1 KSP
157	000	032	005	Chorus Electric Piano 1
158	000	000	006	Electric Piano 2
159	000	001	006	Electric Piano 2 KSP
*160	000	032	006	Chorus Electric Piano 2
161	000	041	006	DX + Analog Electric Piano
162	000	000	007	Harpsichord
163	000	001	007	Harpsichord KSP
164	000	035	007	Harpsichord 2
165	000	000	008	Clavi
166	000	001	008	Clavi KSP
CHROMATIC				
167	000	000	009	Celesta
168	000	000	010	Glockenspiel
169	000	000	011	Music Box
170	000	064	011	Orgel
171	000	000	012	Vibraphone
172	000	001	012	Vibraphone KSP
173	000	000	013	Marimba
174	000	001	013	Marimba KSP
175	000	064	013	Sine Marimba
176	000	097	013	Balimba
177	000	098	013	Log Drums
178	000	000	014	Xylophone
179	000	000	015	Tubular Bells
180	000	096	015	Church Bells
181	000	097	015	Carillon
182	000	000	016	Dulcimer
183	000	035	016	Dulcimer 2
184	000	096	016	Cimbalom
185	000	097	016	Santur
ORGAN				
186	000	000	017	Drawbar Organ
187	000	032	017	Detuned Drawbar Organ
188	000	033	017	60's Drawbar Organ 1
189	000	034	017	60's Drawbar Organ 2
190	000	035	017	70's Drawbar Organ 1
191	000	037	017	60's Drawbar Organ 3
192	000	040	017	16+2'2/3
193	000	064	017	Organ Bass
194	000	065	017	70's Drawbar Organ 2
195	000	066	017	Cheezy Organ
196	000	067	017	Drawbar Organ 2
197	000	000	018	Percussive Organ
198	000	024	018	70's Percussive Organ
199	000	032	018	Detuned Percussive Organ
200	000	033	018	Light Organ
201	000	037	018	Percussive Organ 2
202	000	000	019	Rock Organ
203	000	064	019	Rotary Organ

Voice List / Voice-Liste / Liste des voix / Lista de voces

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
204	000	065	019	Slow Rotary
205	000	066	019	Fast Rotary
206	000	000	020	Church Organ
207	000	032	020	Church Organ 3
208	000	035	020	Church Organ 2
209	000	040	020	Notre Dame
210	000	064	020	Organ Flute
211	000	065	020	Tremolo Organ Flute
212	000	000	021	Reed Organ
213	000	040	021	Puff Organ
214	000	000	022	Accordion
215	000	000	023	Harmonica
216	000	032	023	Harmonica 2
217	000	000	024	Tango Accordion
218	000	064	024	Tango Accordion 2
GUITAR				
219	000	000	025	Nylon Guitar
220	000	043	025	Velocity Guitar Harmonics
221	000	096	025	Ukulele
222	000	000	026	Steel Guitar
223	000	035	026	12-string Guitar
224	000	040	026	Nylon & Steel Guitar
225	000	041	026	Steel Guitar with Body Sound
226	000	096	026	Mandolin
227	000	000	027	Jazz Guitar
228	000	032	027	Jazz Amp
229	000	000	028	Clean Guitar
230	000	032	028	Chorus Guitar
231	000	000	029	Muted Guitar
232	000	040	029	Funk Guitar
233	000	041	029	Muted Steel Guitar
234	000	045	029	Jazz Man
235	000	000	030	Overdriven Guitar
236	000	043	030	Guitar Pinch
237	000	000	031	Distortion Guitar
238	000	040	031	Feedback Guitar
239	000	041	031	Feedback Guitar 2
240	000	000	032	Guitar Harmonics
241	000	065	032	Guitar Feedback
242	000	066	032	Guitar Harmonics 2
BASS				
243	000	000	033	Acoustic Bass
244	000	040	033	Jazz Rhythm
245	000	045	033	Velocity Crossfade Upright Bass
246	000	000	034	Finger Bass
247	000	018	034	Finger Dark
248	000	040	034	Bass & Distorted Electric Guitar
249	000	043	034	Finger Slap Bass
250	000	045	034	Finger Bass 2
251	000	065	034	Modulated Bass
252	000	000	035	Pick Bass
253	000	028	035	Muted Pick Bass
254	000	000	036	Fretless Bass
255	000	032	036	Fretless Bass 2
256	000	033	036	Fretless Bass 3
257	000	034	036	Fretless Bass 4
258	000	000	037	Slap Bass 1
259	000	032	037	Punch Thumb Bass
260	000	000	038	Slap Bass 2
261	000	043	038	Velocity Switch Slap
262	000	000	039	Synth Bass 1
263	000	040	039	Techno Synth Bass
264	000	000	040	Synth Bass 2
265	000	006	040	Mellow Synth Bass
266	000	012	040	Sequenced Bass
267	000	018	040	Click Synth Bass
268	000	019	040	Synth Bass 2 Dark

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
*269	000	040	040	Modular Synth Bass
270	000	041	040	DX Bass
STRINGS				
271	000	000	041	Violin
272	000	008	041	Slow Violin
273	000	000	042	Viola
274	000	000	043	Cello
275	000	000	044	Contrabass
276	000	000	045	Tremolo Strings
277	000	008	045	Slow Tremolo Strings
278	000	040	045	Suspense Strings
279	000	000	046	Pizzicato Strings
280	000	000	047	Orchestral Harp
281	000	040	047	Yang Chin
282	000	000	048	Timpani
ENSEMBLE				
283	000	000	049	Strings 1
284	000	003	049	Stereo Strings
285	000	008	049	Slow Strings
286	000	035	049	60's Strings
287	000	040	049	Orchestra
288	000	041	049	Orchestra 2
289	000	042	049	Tremolo Orchestra
290	000	045	049	Velocity Strings
291	000	000	050	Strings 2
292	000	003	050	Stereo Slow Strings
293	000	008	050	Legato Strings
294	000	040	050	Warm Strings
295	000	041	050	Kingdom
296	000	000	051	Synth Strings 1
297	000	000	052	Synth Strings 2
298	000	000	053	Choir Aahs
299	000	003	053	Choir Choir
300	000	032	053	Mellow Choir
301	000	040	053	Choir Strings
302	000	000	054	Voice Oohs
303	000	000	055	Synth Voice
304	000	040	055	Synth Voice 2
305	000	041	055	Choral
306	000	064	055	Analog Voice
307	000	000	056	Orchestra Hit
308	000	035	056	Orchestra Hit 2
309	000	064	056	Impact
BRASS				
310	000	000	057	Trumpet
311	000	032	057	Warm Trumpet
312	000	000	058	Trombone
313	000	018	058	Trombone 2
314	000	000	059	Tuba
315	000	000	060	Muted Trumpet
316	000	000	061	French Horn
317	000	006	061	French Horn Solo
318	000	032	061	French Horn 2
319	000	037	061	Horn Orchestra
320	000	000	062	Brass Section
321	000	035	062	Trumpet & Trombone Section
322	000	000	063	Synth Brass 1
323	000	020	063	Resonant Synth Brass
324	000	000	064	Synth Brass 2
325	000	018	064	Soft Brass
326	000	041	064	Choir Brass
REED				
327	000	000	065	Soprano Sax
328	000	000	066	Alto Sax
329	000	040	066	Sax Section
330	000	000	067	Tenor Sax
331	000	040	067	Breathy Tenor Sax

Voice List / Voice-Liste / Liste des voix / Lista de voces

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
332	000	000	068	Baritone Sax
333	000	000	069	Oboe
334	000	000	070	English Horn
335	000	000	071	Bassoon
336	000	000	072	Clarinet
PIPE				
337	000	000	073	Piccolo
338	000	000	074	Flute
339	000	000	075	Recorder
340	000	000	076	Pan Flute
341	000	000	077	Blown Bottle
342	000	000	078	Shakuhachi
343	000	000	079	Whistle
344	000	000	080	Ocarina
SYNTH LEAD				
345	000	000	081	Square Lead
346	000	006	081	Square Lead 2
347	000	008	081	LM Square
348	000	018	081	Hollow
349	000	019	081	Shroud
350	000	064	081	Mellow
351	000	065	081	Solo Sine
352	000	066	081	Sine Lead
353	000	000	082	Sawtooth Lead
354	000	006	082	Sawtooth Lead 2
355	000	008	082	Thick Sawtooth
356	000	018	082	Dynamic Sawtooth
357	000	019	082	Digital Sawtooth
358	000	020	082	Big Lead
359	000	096	082	Sequenced Analog
360	000	000	083	Calliope Lead
361	000	065	083	Pure Lead
362	000	000	084	Chiff Lead
363	000	000	085	Charang Lead
364	000	064	085	Distorted Lead
365	000	000	086	Voice Lead
366	000	000	087	Fifths Lead
367	000	035	087	Big Five
368	000	000	088	Bass & Lead
369	000	016	088	Big & Low
370	000	064	088	Fat & Perky
371	000	065	088	Soft Whirl
SYNTH PAD				
372	000	000	089	New Age Pad
373	000	064	089	Fantasy
374	000	000	090	Warm Pad
375	000	000	091	Poly Synth Pad
376	000	000	092	Choir Pad
377	000	066	092	Itopia
378	000	000	093	Bowed Pad
379	000	000	094	Metallic Pad
380	000	000	095	Halo Pad
381	000	000	096	Sweep Pad
SYNTH EFFECTS				
382	000	000	097	Rain
383	000	065	097	African Wind
384	000	066	097	Carib
385	000	000	098	Sound Track
386	000	027	098	Prologue
387	000	000	099	Crystal
388	000	012	099	Synth Drum Comp
389	000	014	099	Popcorn
390	000	018	099	Tiny Bells
391	000	035	099	Round Glockenspiel
392	000	040	099	Glockenspiel Chimes
393	000	041	099	Clear Bells
394	000	042	099	Chorus Bells

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
395	000	065	099	Soft Crystal
396	000	070	099	Air Bells
397	000	071	099	Bell Harp
398	000	072	099	Gamelimba
399	000	000	100	Atmosphere
400	000	018	100	Warm Atmosphere
401	000	019	100	Hollow Release
402	000	040	100	Nylon Electric Piano
403	000	064	100	Nylon Harp
404	000	065	100	Harp Vox
405	000	066	100	Atmosphere Pad
406	000	000	101	Brightness
407	000	000	102	Goblins
408	000	064	102	Goblins Synth
409	000	065	102	Creeper
410	000	067	102	Ritual
411	000	068	102	To Heaven
412	000	070	102	Night
413	000	071	102	Glisten
414	000	096	102	Bell Choir
415	000	000	103	Echoes
416	000	000	104	Sci-Fi
WORLD				
417	000	000	105	Sitar
418	000	032	105	Detuned Sitar
419	000	035	105	Sitar 2
420	000	097	105	Tamboura
421	000	000	106	Banjo
422	000	028	106	Muted Banjo
423	000	096	106	Rabab
424	000	097	106	Gopichant
425	000	098	106	Oud
426	000	000	107	Shamisen
427	000	000	108	Koto
428	000	096	108	Taisho-kin
429	000	097	108	Kanoon
430	000	000	109	Kalimba
431	000	000	110	Bagpipe
432	000	000	111	Fiddle
433	000	000	112	Shanai
PERCUSSIVE				
434	000	000	113	Tinkle Bell
435	000	096	113	Bonang
436	000	097	113	Altair
437	000	098	113	Gamelan Gongs
438	000	099	113	Stereo Gamelan Gongs
439	000	100	113	Rama Cymbal
440	000	000	114	Agogo
441	000	000	115	Steel Drums
442	000	097	115	Glass Percussion
443	000	098	115	Thai Bells
444	000	000	116	Woodblock
445	000	096	116	Castanets
446	000	000	117	Taiko Drum
447	000	096	117	Gran Cassa
448	000	000	118	Melodic Tom
449	000	064	118	Melodic Tom 2
450	000	065	118	Real Tom
451	000	066	118	Rock Tom
452	000	000	119	Synth Drum
453	000	064	119	Analog Tom
454	000	065	119	Electronic Percussion
455	000	000	120	Reverse Cymbal
SOUND EFFECTS				
456	000	000	121	Fret Noise
457	000	000	122	Breath Noise
458	000	000	123	Seashore

Voice No.	Bank Select		MIDI Program Change# (1-128)	Voice Name
	MSB (0-127)	LSB (0-127)		
459	000	000	124	Bird Tweet
460	000	000	125	Telephone Ring
461	000	000	126	Helicopter
462	000	000	127	Applause
463	000	000	128	Gunshot
464	064	000	001	Cutting Noise
465	064	000	002	Cutting Noise 2
466	064	000	004	String Slap
467	064	000	017	Flute Key Click
468	064	000	033	Shower
469	064	000	034	Thunder
470	064	000	035	Wind
471	064	000	036	Stream
472	064	000	037	Bubble
473	064	000	038	Feed
474	064	000	049	Dog
475	064	000	050	Horse
476	064	000	051	Bird Tweet 2
477	064	000	056	Maou
478	064	000	065	Phone Call
479	064	000	066	Door Squeak
480	064	000	067	Door Slam
481	064	000	068	Scratch Cut
482	064	000	069	Scratch Split
483	064	000	070	Wind Chime
484	064	000	071	Telephone Ring 2
485	064	000	081	Car Engine Ignition
486	064	000	082	Car Tires Squeal
487	064	000	083	Car Passing
488	064	000	084	Car Crash
489	064	000	085	Siren
490	064	000	086	Train
491	064	000	087	Jet Plane
492	064	000	088	Starship
493	064	000	089	Burst
494	064	000	090	Roller Coaster
495	064	000	091	Submarine
496	064	000	097	Laugh
497	064	000	098	Scream
498	064	000	099	Punch
499	064	000	100	Heartbeat
500	064	000	101	Footsteps
501	064	000	113	Machine Gun
502	064	000	114	Laser Gun
503	064	000	115	Explosion
504	064	000	116	Firework

The voice number with an asterisk (*) is XGlite optional voice.

Voice-Nummern mit einem Stern (*) sind optionale Xglite-Voices.

Le numéro de voix porteur d'un astérisque (*) est une voix XGlite en option.

El número de voz con un asterisco (*) es una voz opcional de XGlite.



Drum Kit List / Drum Kit-Liste / Liste des kits de

- " " indicates that the drum sound is the same as "Standard Kit 1".
- Each percussion voice uses one note.
- The MIDI Note # and Note are actually one octave lower than keyboard Note # and Note. For example, in "117: Standard Kit 1", the "Seq Click H" (Note# 36/Note C1) corresponds to (Note# 24/Note C0).
- Key Off: Keys marked "O" stop sounding the instant they are released.
- Voices with the same Alternate Note Number (*1 ... 4) cannot be played simultaneously. (They are designed to be played alternately with each other.)

- „ " bedeutet, dass der Schlagzeugklang gleich „Standard Kit 1“ ist.
- Jede Perkussionsnote belegt eine Note.
- Die MIDI-Note # und Note sind in Wirklichkeit eine Octave tiefer als hier aufgeführt. Beispiel: In „117: Standard Kit 1“ entspricht die „Seq Click H“ (Note# 36/Note C1) der Note (Note# 24/Note C0).
- Key Off: Mit „O“ bezeichnete Tasten hören sofort auf zu klingen, sobald sie losgelassen werden.
- Stimmen mit derselben Alternate Note Number (*1 ... 4) können nicht gleichzeitig gespielt werden. (Diese Stimmen sind dazu gedacht, wechselweise gespielt zu werden.)

	Voice No.						117	118	119	120	121	122
	MSB (0-127) / LSB (0-127) / PC (1-128)			Key Off	Alternate assign		127/000/001	127/000/002	127/000/009	127/000/017	127/000/025	127/000/026
	Keyboard Note#	Note	MIDI Note#				Note	Standard Kit 1	Standard Kit 2	Room Kit	Rock Kit	Electronic Kit
	25	C#	0	13	C#	-1	3	Surdo Mute				
	26	D	0	14	D	-1	3	Surdo Open				
	27	D#	0	15	D#	-1		Hi Q				
	28	E	0	16	E	-1		Whip Slap				
	29	F	0	17	F	-1	4	Scratch H				
	30	F#	0	18	F#	-1	4	Scratch L				
	31	G	0	19	G	-1		Finger Snap				
	32	G#	0	20	G#	-1		Click Noise				
	33	A	0	21	A	-1		Metronome Click				
	34	A#	0	22	A#	-1		Metronome Bell				
	35	B	0	23	B	-1		Seq Click L				
	36	C	1	24	C	0		Seq Click H				
	37	C#	1	25	C#	0		Brush Tap				
	38	D	1	26	D	0	O	Brush Swirl				
	39	D#	1	27	D#	0		Brush Slap				
	40	E	1	28	E	0	O	Brush Tap Swirl			Reverse Cymbal	Reverse Cymbal
	41	F	1	29	F	0	O	Snare Roll	Snare Roll 2			
	42	F#	1	30	F#	0		Castanet			Hi Q 2	Hi Q 2
	43	G	1	31	G	0		Snare Soft	Snare Soft 2	Snare Noisy	Snare Snappy Electro	Snare Noisy 4
	44	G#	1	32	G#	0		Sticks				
	45	A	1	33	A	0		Kick Soft		Kick Tight 2	Kick 3	Kick Tight 2
	46	A#	1	34	A#	0		Open Rim Shot	Open Rim Shot H Short			
	47	B	1	35	B	0		Kick Tight	Kick Tight Short	Kick 2	Kick Gate	Kick Analog Short
	48	C	2	36	C	1		Kick	Kick Short	Kick Gate	Kick Gate Heavy	Kick Analog
	49	C#	2	37	C#	1		Side Stick				Side Stick Analog
	50	D	2	38	D	1		Snare	Snare Short	Snare Snappy	Snare Rock	Snare Noisy 2
	51	D#	2	39	D#	1		Hand Clap				Snare Analog 2
	52	E	2	40	E	1		Snare Tight	Snare Tight H	Snare Tight Snappy	Snare Rock Rim	Snare Noisy 3
	53	F	2	41	F	1		Floor Tom L	Tom Room 1	Tom Rock 1	Tom Electro 1	Tom Analog 1
	54	F#	2	42	F#	1	1	Hi-Hat Closed				Hi-Hat Closed Analog
	55	G	2	43	G	1		Floor Tom H	Tom Room 2	Tom Rock 2	Tom Electro 2	Tom Analog 2
	56	G#	2	44	G#	1	1	Hi-Hat Pedal				Hi-Hat Closed Analog 2
	57	A	2	45	A	1		Low Tom	Tom Room 3	Tom Rock 3	Tom Electro 3	Tom Analog 3
	58	A#	2	46	A#	1	1	Hi-Hat Open				Hi-Hat Open Analog
	59	B	2	47	B	1		Mid Tom L	Tom Room 4	Tom Rock 4	Tom Electro 4	Tom Analog 4
	60	C	3	48	C	2		Mid Tom H	Tom Room 5	Tom Rock 5	Tom Electro 5	Tom Analog 5
	61	C#	3	49	C#	2		Crash Cymbal 1				Crash Analog
	62	D	3	50	D	2		High Tom	Tom Room 6	Tom Rock 6	Tom Electro 6	Tom Analog 6
	63	D#	3	51	D#	2		Ride Cymbal 1				
	64	E	3	52	E	2		Chinese Cymbal				
	65	F	3	53	F	2		Ride Cymbal Cup				
	66	F#	3	54	F#	2		Tambourine				
	67	G	3	55	G	2		Splash Cymbal				
	68	G#	3	56	G#	2		Cowbell				Cowbell Analog
	69	A	3	57	A	2		Crash Cymbal 2				
	70	A#	3	58	A#	2		Vibraslap				
	71	B	3	59	B	2		Ride Cymbal 2				
	72	C	4	60	C	3		Bongo H				
	73	C#	4	61	C#	3		Bongo L				
	74	D	4	62	D	3		Conga H Mute				Conga Analog H
	75	D#	4	63	D#	3		Conga H Open				Conga Analog M
	76	E	4	64	E	3		Conga L				Conga Analog L
	77	F	4	65	F	3		Timbale H				
	78	F#	4	66	F#	3		Timbale L				
	79	G	4	67	G	3		Agogo H				
	80	G#	4	68	G#	3		Agogo L				
	81	A	4	69	A	3		Cabasa				
	82	A#	4	70	A#	3		Maracas				Maracas 2
	83	B	4	71	B	3	O	Samba Whistle H				
	84	C	5	72	C	4	O	Samba Whistle L				
	85	C#	5	73	C#	4		Guiro Short				
	86	D	5	74	D	4	O	Guiro Long				
	87	D#	5	75	D#	4		Claves				Claves 2
	88	E	5	76	E	4		Wood Block H				
	89	F	5	77	F	4		Wood Block L				
	90	F#	5	78	F#	4		Cuica Mute			Scratch H 2	Scratch H 2
	91	G	5	79	G	4		Cuica Open			Scratch L 2	Scratch L 3
	92	G#	5	80	G#	4	2	Triangle Mute				
	93	A	5	81	A	4	2	Triangle Open				
	94	A#	5	82	A#	4		Shaker				
	95	B	5	83	B	4		Jingle Bells				
	96	C	6	84	C	5		Bell Tree				
	97	C#	6	85	C#	5						
	98	D	6	86	D	5						
	99	D#	6	87	D#	5						
	100	E	6	88	E	5						
	101	F	6	89	F	5						
	102	F#	6	90	F#	5						
	103	G	6	91	G	5						

percussion / Lista de juegos de batería

- « [] » indique que les sonorités de percussion sont identiques à celles de « Standard Kit 1 ».
- Chaque voix de percussion utilise une note unique.
- Le numéro de note MIDI (Note #) et la note MIDI se situent en réalité à une octave inférieure à celle qui est indiquée dans la liste. Par exemple, dans « 117 : Standard Kit 1 », « Seq Click H » (Note# 36/Note C1) correspond à (Note# 24/Note C0).
- Key Off : pour les touches signalées par « O », l'émission de sons s'arrête instantanément aussitôt que les touches sont relâchées.
- Les voix portant un même numéro de note alternative (*1 ... 4) ne peuvent pas être jouées simultanément. (Elles sont en effet conçues pour être interprétées en alternance).

- « [] » indica que el sonido de batería es el mismo que el "Standard Kit 1".
- Cada sonido de percusión utiliza una nota.
- La nota MIDI # y la nota son en realidad una octava menos de lo que aparece en la lista. Por ejemplo, en "117: Standard Kit 1", el "Seq Click H" (Nota# 36/Nota C1) corresponde a (Nota# 24/Nota C0).
- Tecla desactivada: las teclas marcadas con "O" dejan de sonar en el momento en que se sueltan.
- Los sonidos con el mismo número alterno de nota (*1 ... 4) no pueden tocarse simultáneamente. (Están diseñados para tocarse alternativamente el uno con el otro.)

		Voice No.					117	123	124	125	126	127	128		
		MSB (0-127) / LSB (0-127) / PC (1-128)					127/000/001	127/000/113	127/000/033	127/000/041	127/000/049	126/000/001	126/000/002		
		Keyboard		MIDI		Key Off	Alternate assign	Standard Kit 1	Dance Kit	Jazz Kit	Brush Kit	Symphony Kit	SFX Kit 1	SFX Kit 2	
Note#	Note	Note#	Note	Note#	Note										
		25	C# 0	13	C# -1		3	Surdo Mute							
		26	D 0	14	D -1		3	Surdo Open							
		27	D# 0	15	D# -1			Hi Q							
		28	E 0	16	E -1			Whip Slap							
		29	F 0	17	F -1		4	Scratch H							
		30	F# 0	18	F# -1		4	Scratch L							
		31	G 0	19	G -1			Finger Snap							
		32	G# 0	20	G# -1			Click Noise							
		33	A 0	21	A -1			Metronome Click							
		34	A# 0	22	A# -1			Metronome Bell							
		35	B 0	23	B -1			Seq Click L							
		36	C 1	24	C 0			Seq Click H							
		37	C# 1	25	C# 0			Brush Tap							
C1	C#1	38	D 1	26	D 0	O		Brush Swirl							
D1	D#1	39	D# 1	27	D# 0			Brush Slap							
E1	E	40	E 1	28	E 0	O		Brush Tap Swirl	Reverse Cymbal						
F1	F#1	41	F 1	29	F 0	O		Snare Roll							
G1	G#1	42	F# 1	30	F# 0			Castanet	Hi Q 2						
A1	A#1	43	G 1	31	G 0			Snare Soft	Snare Techno	Snare Jazz H	Brush Slap 2				
B1	B	44	G# 1	32	G# 0			Sticks							
C2	C#2	45	A 1	33	A 0			Kick Soft	Kick Techno Q			Kick Soft 2			
D2	D#2	46	A# 1	34	A# 0			Open Rim Shot	Rim Gate						
E2	E	47	B 1	35	B 0			Kick Tight	Kick Techno L			Gran Cassa			
F2	F#2	48	C 2	36	C 1			Kick	Kick Techno	Kick Jazz	Kick Small	Gran Cassa Mute	Cutting Noise	Phone Call	
G2	G#2	49	C# 2	37	C# 1			Side Stick	Side Stick Analog				Cutting Noise 2	Door Squeak	
A2	A#2	50	D 2	38	D 1			Snare	Snare Clap	Snare Jazz L	Brush Slap 3	Band Snare		Door Slam	
B2	B	51	D# 2	39	D# 1			Hand Clap					String Slap	Scratch Cut	
C3	C#3	52	E 2	40	E 1			Snare Tight	Snare Dry	Snare Jazz M	Brush Tap 2	Band Snare 2		Scratch H 3	
D3	D#3	53	F 2	41	F 1			Floor Tom L	Tom Analog 1	Tom Jazz 1	Tom Brush 1	Tom Jazz 1		Wind Chime	
E3	E	54	F# 2	42	F# 1	1		Hi-Hat Closed	Hi-Hat Closed Analog 3					Telephone Ring 2	
F3	F#3	55	G 2	43	G 1			Floor Tom H	Tom Analog 2	Tom Jazz 2	Tom Brush 2	Tom Jazz 2			
G3	G#3	56	G# 2	44	G# 1	1		Hi-Hat Pedal	Hi-Hat Closed Analog 4						
A3	A#3	57	A 2	45	A 1			Low Tom	Tom Analog 3	Tom Jazz 3	Tom Brush 3	Tom Jazz 3			
B3	B	58	A# 2	46	A# 1	1		Hi-Hat Open	Hi-Hat Open Analog 2						
C4	C#4	59	B 2	47	B 1			Mid Tom L	Tom Analog 4	Tom Jazz 4	Tom Brush 4	Tom Jazz 4			
D4	D#4	60	C 3	48	C 2			Mid Tom H	Tom Analog 5	Tom Jazz 5	Tom Brush 5	Tom Jazz 5			
E4	E	61	C# 3	49	C# 2			Crash Cymbal 1	Crash Analog			Hand Cymbal			
F4	F#4	62	D 3	50	D 2			High Tom	Tom Analog 6	Tom Jazz 6	Tom Brush 6	Tom Jazz 6			
G4	G#4	63	D# 3	51	D# 2			Ride Cymbal 1				Hand Cymbal Short			
A4	A#4	64	E 3	52	E 2			Chinese Cymbal					Flute Key Click	Car Engine Ignition	
B4	B	65	F 3	53	F 2			Ride Cymbal Cup						Car Tires Squeak	
C5	C#5	66	F# 3	54	F# 2			Tambourine						Car Passing	
D5	D#5	67	G 3	55	G 2			Splash Cymbal						Car Crash	
E5	E	68	G# 3	56	G# 2			Cowbell	Cowbell Analog					Siren	
F5	F#5	69	A 3	57	A 2			Crash Cymbal 2				Hand Cymbal 2		Train	
G5	G#5	70	A# 3	58	A# 2			Vibraslap						Jet Plane	
A5	A#5	71	B 3	59	B 2			Ride Cymbal 2				Hand Cymbal 2 Short		Starship	
B5	B	72	C 4	60	C 3			Bongo H						Burst	
C6	C#6	73	C# 4	61	C# 3			Bongo L						Roller Coaster	
D6	D#6	74	D 4	62	D 3			Conga H Mute	Conga Analog H					Submarine	
E6	E	75	D# 4	63	D# 3			Conga H Open	Conga Analog M						
F6	F#6	76	E 4	64	E 3			Conga L	Conga Analog L						
G6	G#6	77	F 4	65	F 3			Timbale H							
A6	A#6	78	F# 4	66	F# 3			Timbale L							
B6	B	79	G 4	67	G 3			Agogo H							
C7	C#7	80	G# 4	68	G# 3			Agogo L							
D7	D#7	81	A 4	69	A 3			Cabasa					Shower	Laugh	
E7	E	82	A# 4	70	A# 3			Maracas	Maracas 2				Thunder	Scream	
F7	F#7	83	B 4	71	B 3	O		Samba Whistle H					Wind	Punch	
G7	G#7	84	C 5	72	C 4	O		Samba Whistle L					Stream	Heartbeat	
A7	A#7	85	C# 5	73	C# 4			Guiro Short					Bubble	Footsteps	
B7	B	86	D 5	74	D 4	O		Guiro Long					Feed		
C8	C#8	87	D# 5	75	D# 4			Claves	Claves 2						
D8	D#8	88	E 5	76	E 4			Wood Block H							
E8	E	89	F 5	77	F 4			Wood Block L							
F8	F#8	90	F# 5	78	F# 4			Cuica Mute	Scratch H 2						
G8	G#8	91	G 5	79	G 4			Cuica Open	Scratch L 3						
A8	A#8	92	G# 5	80	G# 4		2	Triangle Mute							
B8	B	93	A 5	81	A 4		2	Triangle Open							
C9	C#9	94	A# 5	82	A# 4			Shaker							
D9	D#9	95	B 5	83	B 4			Jingle Bells							
E9	E	96	C 6	84	C 5			Bell Tree							
F9	F#9	97	C# 6	85	C# 5								Dog	Machine Gun	
G9	G#9	98	D 6	86	D 5								Horse	Laser Gun	
A9	A#9	99	D# 6	87	D# 5								Bird Tweet 2	Explosion	
B9	B	100	E 6	88	E 5									Firework	
C10	C#10	101	F 6	89	F 5										
D10	D#10	102	F# 6	90	F# 5										
E10	E	103	G 6	91	G 5								Maou		



Style List / Style-Liste / Liste des styles / Lista de estilos

Style No.	Style Name
8BEAT	
001	8BeatModern
002	Cool8Beat
003	60'sGuitarPop
004	8BeatAdria
005	60's8Beat
006	BubblegumPop
007	BritPopSwing
008	8Beat
009	OffBeat
010	60'sRock
011	HardRock
012	RockShuffle
013	8BeatRock
16BEAT	
014	16Beat
015	PopShuffle1
016	PopShuffle2
017	GuitarPop
018	16BeatUptempo
019	KoolShuffle
020	JazzRock
021	HipHopLight
BALLAD	
022	PianoBallad
023	LoveSong
024	6/8ModernEP
025	6/8SlowRock
026	6/8OrchBallad
027	OrganBallad
028	PopBallad
029	16BeatBallad1
030	16BeatBallad2
DANCE	
031	EuroTrance
032	Ibiza
033	DreamDance
034	NewHipHop
035	PopR&B
036	TrancePop
037	ChartPop
038	HouseMusik
039	SwingHouse
040	TechnoPolis
041	Clubdance
042	ClubLatin
043	Garage1
044	Garage2
045	TechnoParty
046	UKPop
047	HipHopGroove
048	HipShuffle
049	HipHopPop
DISCO	
050	70'sDisco1
051	70'sDisco2
052	LatinDisco
053	DiscoPhilly
054	SaturdayNight
055	DiscoChocolate
056	DiscoHands

Style No.	Style Name
SWING&JAZZ	
057	BigBandFast
058	BigBandMedium
059	BigBandBallad
060	BigBandShuffle
061	JazzClub
062	Swing1
063	Swing2
064	OrchestraSwing
065	Five/Four
066	JazzBallad
067	Dixieland
068	Ragtime
069	AfroCuban
070	Charleston
R&B	
071	Soul
072	DetroitPop1
073	60'sRock&Roll
074	6/8Soul
075	ModernR&B
076	CrocoTwist
077	Rock&Roll
078	DetroitPop2
079	BoogieWoogie
080	ComboBoogie
081	6/8Blues
COUNTRY	
082	Country8Beat
083	CountryPop
084	CountrySwing
085	CountryBallad
086	Country2/4
087	CowboyBoogie
088	CountryShuffle
089	Bluegrass
LATIN	
090	BrazilianSamba
091	BossaNova
092	PopBossa
093	Tijuana
094	DiscoLatin
095	Mambo
096	Salsa
097	Beguine
098	GuitarRumba
099	RumbaFlamenco
100	Rumbalsland
101	Reggae
BALLROOM	
102	VienneseWaltz
103	EnglishWaltz
104	Slowfox
105	Foxtrot
106	Quickstep
107	Tango
108	Pasodoble
109	Samba
110	ChaChaCha
111	Rumba
112	Jive

Style No.	Style Name
TRAD/WORLD	
113	USMarch
114	6/8March
115	GermanMarch
116	PolkaPop
117	OberPolka
118	Tarantella
119	Showtune
120	ChristmasSwing
121	ChristmasWaltz
122	ScottishReel
123	Hawaiian
124	Indi Pop
125	Bhangra
126	Garba
127	Goa Pop
128	Bhajan
WALTZ	
129	ItalianWaltz
130	MariachiWaltz
131	GuitarSerenade
132	SwingWaltz
133	JazzWaltz1
134	JazzWaltz2
135	CountryWaltz
136	OberWaltzer
137	Musette
CHILDREN	
138	Learning2/4
139	Learning4/4
140	Learning6/8
141	Fun 3/4
142	Fun 4/4
PIANIST	
143	Stride
144	PianoBlues1
145	PianoBlues2
146	PianoRag
147	PianoRock&Roll
148	PianoBoogie
149	PianoJazzWaltz
150	PianoJazzBld
151	Arpeggio
152	Musical
153	SlowRock
154	8BtPianoBallad
155	PianoSwing



Arpeggio List / Liste der Arpeggios / Liste des arpèges / Lista de arpeggios

Arpeggio No.	Arpeggio Name
01	UpOct1
02	DownOct1
03	UpDnOct2
04	SynArp1
05	SynArp2
06	SyncEcho
07	PulsLine
08	Random
09	Down&Up
10	SuperArp
11	AcidLine
12	TekEcho
13	VelGruv
14	Trance1
15	Trance2
16	SynChord
17	PfArp
18	PfBallad
19	PfChd8th
20	PfShfl
21	PfRock
22	Clavi
23	ChordUp
24	ChdDance
25	Salsa1
26	Salsa2
27	Reggae
28	Strum
29	GuitChd1
30	GuitChd2
31	GuitChd3
32	GuitArp
33	FngrPck1
34	FngrPck2
35	Samba
36	SlapBs
37	AcidBs
38	TranceBs
39	LatinBs
40	FunkyBs
41	PercArp
42	Perc1
43	Perc2
44	African
45	Tamb
46	R&B
47	Funk
48	HipHop
49	Latin
50	Arabic



Music Database List / Musikdatenbankliste / Liste des bases de données musicales /
Lista de la base de datos musical

MDB No.	MDB Name	MDB No.	MDB Name	MDB No.	MDB Name	MDB No.	MDB Name
POP		065	Kids	129	New York	193	Bonanza
001	AlvFever	066	KillSoft	130	PanthrSw	194	BoxerFit
002	BoySumer	067	Nine PM	131	PetiteCl	195	CntryRds
003	CoinLane	068	SingBack	132	RedRoses	196	GreenGrs
004	Croco Rk	069	StrandD	133	SaintMch	197	Jambala
005	DayPdise	BALLAD		134	SatinDll	198	LondonSt
006	DwnTown	070	AdelineB	135	SF Heart	199	LooseEL
007	EasySday	071	ArgenCry	136	ShearJz	200	TopWorld
008	GoMyWay	072	BeautBdy	137	SplinkyBr	201	YlwRose
009	HighTide	073	Bl Bayou	138	SunnySde	DISCO & PARTY	
010	HoldDown	074	CatMemry	139	TstHoney	202	AlhHwaih
011	HowDeep!	075	CavaSolo	140	Tunisia	203	Babylon
012	HurryLuv	076	E Weiss	141	TwoFoot5	204	Barbados
013	I breath	077	ElizSere	142	USPatrol	205	DnceBird
014	I'm Torn	078	ElvGhett	143	WhatsNew	206	FestaMex
015	Imagine	079	Feeling	144	Wild Cat	207	HandsPty
016	Infatuat	080	Fly Away	145	WondrLnd	208	LuvTheme
017	ISurvive	081	Fnl Date	EASY LISTENING		209	ModrnTlk
018	JustCall	082	GreenSlv	146	Arriva	210	NxtAlice
019	JustWay	083	GtCncrt	147	BlackFst	211	PalomaFl
020	LeadPack	084	HrdToSay	148	ByeBlues	212	PubPiano
021	LoveFeel	085	IBThere	149	CaliBlue	213	Tijuana
022	LoveMeT	086	LonlyPan	150	CiaoCpri	214	Why MCA?
023	LveMeDo	087	MBoxDnce	151	Close2U	BALLROOM	
024	Mi Shell	088	Mn Rivr	152	DAmorStr	215	BrazilBr
025	My Baby	089	My Song	153	DolanesM	216	CherryTp
026	NikitTrp	090	NorwWood	154	ElCondor	217	DanubeWv
027	NoMatter	091	OnMyMnd	155	Enrtain	218	MantoStr
028	ProudGtr	092	OverRbow	156	Frippers	219	SandmnFx
029	RainOnMe	093	Red Lady	157	LoveLove	220	SpainTwn
030	SailingSx	094	ReleseMe	158	LuckySax	221	SundyNvr
031	SeeAgain	095	SavingLv	159	LuvStory	222	TangoAc
032	Sept.Pop	096	Shore Cl	160	MyPrince	223	Tea4Two
033	SultanSw	097	SierraMd	161	OSoleMio	224	TulipWtz
034	Sure	098	SilverMn	162	PupetStr	225	YesSirQk
035	SweetLrd	099	SmokyEye	163	Raindrop	TRADITIONAL	
036	ThnkMsc	100	SndOfSil	164	RedMouln	226	AlpenTri
037	TitanichH	101	SumerPlc	165	R'ticGtr	227	AnchorAw
038	UNeedLv	102	TblWater	166	Schiwago	228	Balalaik
039	UptnGrl	103	WhereLov	167	ShadowGt	229	BlkSheep
040	WantToBe	104	WhisprSx	168	SingRain	230	CampRace
041	WatchGrl	105	WomanLov	169	SmallWld	231	Ceilidh
042	WhatALoo	R & B		170	SpkSoft	232	Cielito
043	WhitePle	106	AmazingG	171	SpnishEy	233	CielPari
044	WhleAgn	107	BoogiePf	172	StrangeN	234	Cl Polka
045	Woman	108	Clock Rk	173	TieRibbn	235	Comrades
046	YellowSub	109	CU later	174	TimeGoes	236	DAmorCl
047	YesterPf	110	GreenDor	175	WhiteXmas	237	FrogSong
ROCK		111	HappyDay	176	WishStar	238	Funiculi
048	DavAgain	112	JohnnyB	177	WondrWld	239	GrndClok
049	JumpRock	113	MercySax	LATIN		240	HappyPlk
050	OyComCha	114	OldHouse	178	BambaLa	241	Herzlin
051	PickUpPc	115	RisingSn	179	BeHappy!	242	HornPipe
052	RdRiverR	116	S Preems	180	CopaLola	243	JacknJil
053	SatsfyGt	117	ShookUp	181	DayNight	244	JinglBel
054	Sheriff	118	SuperStv	182	Ipanema	245	Kufstein
055	SmokeWtr	119	TeddyBer	183	JamboMbo	246	MexiHat
056	TwistAgn	120	Yeh Orgn	184	MarinaAc	247	MickMrch
057	VenusPop	SWING & JAZZ		185	MuchoTrp	248	RkABaby
DANCE		121	Alex Rag	186	SmoothLt	249	RIBarrel
058	2 of Us	122	Blue Set	187	SunOfLif	250	Showbiz
059	B Leave	123	ChooChoo	188	Sunshine	251	SnowWtz
060	Back St	124	DayOfW&R	189	Tico Org	252	StarMrch
061	Crockett	125	HighMoon	190	TrbWave	253	WashPost
062	DialEmma	126	InMood	COUNTRY		254	WdCuttrs
063	DsrtRose	127	MistySax	191	ABitMore	255	XmasWalz
064	FunkyTwn	128	MoonLit	192	BlownWnd	256	YankDood



Songs Provided On the Supplied CD-ROM / Songs auf der beiliegenden CD-ROM / Morceaux disponibles sur le CD-ROM fourni / Canciones incluidas en el CD-ROM proporcionado

File Name	Song Name	Composer
001Nutcr.mid	Danse des Mirlitons from "The Nutcracker"	P.I. Tchaikovsky
002Orphe.mid	"Orphée aux Enfers" Overture	J. Offenbach
003Slavo.mid	Slavonic Dances op.72-2	A. Dvořák
004Prima.mid	La Primavera (from Le Quattro Stagioni)	A. Vivaldi
005Medit.mid	Méditation (Thaïs)	J. Massenet
006Guill.mid	Guillaume Tell	G. Rossini
007Fruhl.mid	Frühlingslied	F. Mendelssohn
008Ungar.mid	Ungarische Tänze Nr.5	J. Brahms
009Fruhl.mid	Frühlingsstimmen	J. Strauss II
010Dolly.mid	Dolly's Dreaming and Awakening	T.Oesten
011Cande.mid	La Candeur	J.F.Burgmüller
012Arabe.mid	Arabesque	J.F.Burgmüller
013Pasto.mid	Pastorale	J.F.Burgmüller
014Petit.mid	Petite Réunion	J.F.Burgmüller
015Innoc.mid	Innocence	J.F.Burgmüller
016Progr.mid	Progrès	J.F.Burgmüller
017Taren.mid	Tarentelle	J.F.Burgmüller
018Cheva.mid	La Chevaleresque	J.F.Burgmüller
019Etude.mid	Etude op.10-3 "Chanson de l'adieu"	F.Chopin
020Marci.mid	Marcia alla Turca	L.v. Beethoven
021Turki.mid	Turkish March	W.A. Mozart
022Valse.mid	Valse op.64-1 "Petit Chien"	F.Chopin
023Menue.mid	Menuett	L. Boccherini
024Momen.mid	Moments Musicaux op.94-3	F. Schubert
025Enter.mid	The Entertainer	S. Joplin
026Prelu.mid	Prelude (Wohltemperierte Klavier 1-1)	J.S. Bach
027Violl.mid	La Violette	L.Streabbog
028Angel.mid	Angels Serenade	Traditional
029Saraf.mid	Krasnyj Sarafan	Traditional
030Ameri.mid	America the Beautiful	S.A. Ward
031Brown.mid	Little Brown Jug	Traditional
032Lomon.mid	Loch Lomond	Traditional
033Bonni.mid	My Bonnie	Traditional
034Londo.mid	Londonderry Air	Traditional
035Banjo.mid	Ring de Banjo	S.C. Foster
036Vogle.mid	Wenn ich ein Vöglein wär ?	Traditional
037Lorel.mid	Die Lorelei	F. Silcher
038Funic.mid	Funiculi Funicula	L. Denza
039Turke.mid	Turkey in the Straw	Traditional
040Camp.mid	Camptown Races	S.C. Foster
041Jingl.mid	Jingle Bells	J.S. Pierpont
042Muss.mid	Muss i denn	F. Silcher
043Liebe.mid	Liebesträume Nr.3	F. Liszt
044Jesu.mid	Jesu, Joy Of Man's Desiring	J.S. Bach
045Joy.mid	Ode to Joy	L.v. Beethoven
046Pearl.mid	Pearl Fisher	G. Bizet
047Gavot.mid	Gavotte	F.J. Gossec
048Seren.mid	Serenade/Haydn	F.J. Haydn
049Menue.mid	Menuett BWV. Anh.114	J.S. Bach
050Canon.mid	Canon in D	J. Pachelbel
051Vogel.mid	Der Vogelfänger Bin Ich Ja "Die Zauberflöte"	W.A. Mozart
052Piano.mid	Piano Sonate No.14 op.27-2 "Mondschein"	L.v. Beethoven
053Surpr.mid	The "Surprise" Symphony No.94	F.J. Haydn
054WildR.mid	To a Wild Rose	E.A. MacDowell
055Chans.mid	Chanson du Toreador	G. Bizet
056Babbi.mid	O Mio Babbino Caro	G. Puccini
057RowRo.mid	Row Row Row Your Boat (DUET)	Traditional
058Smoky.mid	On Top of Old Smoky (DUET)	Traditional
059WeWis.mid	We Wish You A Merry Christmas (DUET)	Traditional
060ImMai.mid	Im Mai (DUET)	Traditional
061Chris.mid	O Christmas Tree (DUET)	Traditional
062MaryH.mid	Mary Had a Little Lamb (DUET)	Traditional
063TenLi.mid	Ten Little Indians (DUET)	S. Winner
064PopGo.mid	Pop Goes The Weasel (DUET)	Traditional
065Twink.mid	Twinkle Twinkle Little Star (DUET)	Traditional
066Close.mid	Close Your Hands, Open Your Hands (DUET)	J.J. Rousseau
067Cucko.mid	The Cuckoo (DUET)	Traditional
068Augus.mid	O du lieber Augustin (DUET)	Traditional
069Londo.mid	London Bridge (DUET)	Traditional
070Three.mid	Three Blind Mice (DUET)	Traditional

The easy song arranger can only be used with songs that include chord data.

Easy Song Arranger kann nur zusammen mit Songs verwendet werden, die Akkorddaten enthalten.

La fonction Easy Song Arranger ne s'utilise qu'avec des morceaux comportant des données d'accord.

La función Easy Song Arranger (arreglos sencillos de canciones) sólo puede utilizarse con canciones que incluyan datos de acordes.



Effect Type List / Effekttypliste / Liste des

● Harmony Types / Harmony-Typen / Types d'effets Harmony / Tipos de armonía

No.	Harmony Type	Description
01	Duet	<p>Harmony types 01–05 are pitch-based and add one-, two- or three-note harmonies to the single-note melody played in the right hand. These types sound when chords are played in the auto accompaniment range of the keyboard. These Harmony types will also work when playing songs that contain chord data.</p> <p>Die Harmony-Typen 01 bis 05 sind Tonhöheneffekte und bereichern eine monophon im rechten Tastaturbereich gespielte Melodie um ein-, zwei- oder dreistimmige Harmonien. Diese Typen werden nur erzeugt, wenn Akkorde im Tastaturbereich für die Begleitung gespielt werden.</p> <p>Les types d'effets Harmony 01–05 sont des effets basés sur la hauteur et ajoutent des harmonies à une, deux ou trois notes à la mélodie à une seule note jouée de la main droite. Ces effets ne sont audibles que lorsque des accords sont joués dans la section d'accompagnement automatique du clavier.</p> <p>Los tipos de armonía 01–05 se basan en el tono y añaden armonías de una, dos o tres notas a la melodía de una sola nota tocada en la parte de la mano derecha. Estos tipos sólo suenan cuando se tocan acordes en la sección del acompañamiento automático del teclado.</p>
02	Trio	
03	Block	
04	Country	
05	Octave	
06	Trill 1/4 note	<p>Types 6–26 are rhythm-based effects and add embellishments or delayed repeats in time with the auto accompaniment. These types sound whether the auto accompaniment is on or not; however, the actual speed of the effect depends on the Tempo setting. The individual note values in each type let you synchronize the effect precisely to the rhythm. Triplet settings are also available: 1/6 = quarter-note triplets, 1/12 = eighth-note triplets, 1/24 = sixteenth-note triplets.</p> <p>Die Harmony-Typen 6 bis 26 sind Rhythmus-effekte und erzeugen im Takt zur Begleitautomatik Verzierungen oder verzögerte Wiederholungen. Der jeweilige Harmony-Effekt wird sowohl bei eingeschalteter als auch bei ausgeschalteter automatischer Bass/Akkord-Begleitung erzeugt; die Effektgeschwindigkeit hängt jedoch stets von der aktuellen Tempoeinstellung ab. Dank der spezifischen Notenwerte der einzelnen Harmony-Typen können Sie den Effekt präzise mit dem Rhythmus synchronisieren. Es gibt auch Triolen-Einstellungen: 1/6 = Viertelnotentriolen, 1/12 = Achtelnotentriolen, 1/24 = Sechzehntelnotentriolen.</p> <p>Les types 6–26 sont des effets reposant sur le rythme qui ajoutent des embellissements ou des répétitions retardées synchronisées avec l'accompagnement automatique. Ces types d'effets sont audibles que l'accompagnement automatique soit activé ou non. Cependant, la vitesse réelle de l'effet dépend du réglage du tempo. La valeur individuelle des notes pour chaque type vous permet de synchroniser avec précision l'effet sur le rythme. Des réglages de triolet sont également disponibles : 1/6 = triolets de noires, 1/12 = triolets de croches, 1/24 = triolets de doubles croches.</p> <p>Los tipos 6 a 26 son efectos basados en el ritmo y añaden embellecimientos o repeticiones retardadas en sincronización con el acompañamiento automático. Estos tipos suenan tanto si el acompañamiento automático está activado como si no; sin embargo, la velocidad real del efecto depende del ajuste de tempo. Los valores de las notas individuales en cada tipo le permiten sincronizar el efecto y el ritmo con una gran precisión. También hay disponibles ajustes de tresillos: 1/6 = tresillos de notas negras, 1/12 = tresillos de corcheas, 1/24 = tresillos de semicorcheas.</p> <ul style="list-style-type: none"> • The Trill effect Types (06–12) create two-note trills (alternating notes) when two notes are held. • The Tremolo effect Types (13–19) repeat all held notes (up to four). • The Echo effect Types (20–26) create delayed repeats of each note played. • Die Triller-Effekttypen (06 bis 12) erzeugen Triller (zwei Töne in schnellem Wechsel), wenn zwei Tasten gehalten werden. • Mit den Tremolo-Effekttypen (13 bis 19) werden alle gehaltenen Noten (maximal vier Töne) wiederholt. • Die Echo-Effekttypen (20 bis 26) erzeugen verzögerte Wiederholungen jeder gespielten Note. • Les types d'effet Trill (06–12) créent des trilles à deux notes (notes alternées) lorsque deux notes sont maintenues enfoncées. • Les types d'effets Tremolo (13–19) répètent toutes les notes maintenues (jusqu'à quatre notes). • Les types d'effets Echo (20–26) créent des répétitions retardées de chaque note jouée. • Los tipos de efectos de trino (6 a 12) crean trinos de dos notas (notas alternadas) cuando se mantienen pulsadas dos teclas. • Los tipos de efectos de trémolo (13 a 19) repiten todas las notas que se mantienen pulsadas (hasta cuatro). • Los tipos de efectos de eco (20 a 26) crean repeticiones retardadas de cada nota tocada.
07	Trill 1/6 note	
08	Trill 1/8 note	
09	Trill 1/12 note	
10	Trill 1/16 note	
11	Trill 1/24 note	
12	Trill 1/32 note	
13	Tremolo 1/4 note	
14	Tremolo 1/6 note	
15	Tremolo 1/8 note	
16	Tremolo 1/12 note	
17	Tremolo 1/16 note	
18	Tremolo 1/24 note	
19	Tremolo 1/32 note	
20	Echo 1/4 note	
21	Echo 1/6 note	
22	Echo 1/8 note	
23	Echo 1/12 note	
24	Echo 1/16 note	
25	Echo 1/24 note	
26	Echo 1/32 note	

types d'effets / Lista de tipos de efectos

● Reverb Types / Reverb-Typen / Types d'effets Reverb / Tipos de reverberación

No.	Reverb Type	Description
01-03	Hall 1-3	Concert hall reverb. Nachhall in einem Konzertsaal. Réverbération d'une salle de concert. Reverberación de sala de conciertos.
04-05	Room 1-2	Small room reverb. Nachhall in einem kleineren Raum. Réverbération d'une petite salle. Reverberación de sala pequeña.
06-07	Stage 1-2	Reverb for solo instruments. Halleffekte für Soloinstrumente. Réverbération pour instruments solo. Reverberación para instrumentos solistas.
08-09	Plate 1-2	Simulated steel plate reverb. Simulation des Halls in einer Stahlplatte. Simulation de la réverbération d'une plaque d'acier. Reverberación de plancha de acero simulada.
10	Off	No effect. Kein Halleffekt. Pas d'effet. Sin efecto.

● Chorus Types / Chorus-Typen / Types d'effets Chorus / Tipos de coro

No.	Chorus Type	Description
01-02	Chorus 1-2	Conventional chorus program with rich, warm chorusing. Herkömmlicher Chorus-Effekt mit vollem und warmem Klang. Programme de choeur classique avec un effet de choeur riche et chaud. Programa de coros convencionales con coros cálidos y complejos.
03-04	Flanger 1-2	Pronounced three-phase modulation with a slight metallic sound. Deutliche, dreiphasige Modulation mit leicht metallischem Klang. Modulation triphasée prononcée avec un son légèrement métallique. Modulación de tres fases pronunciada con un sonido un poco metálico.
05	Off	No effect. Kein Effekt. Pas d'effet. Sin efecto.

Memo

Memo



U.R.G., Pro Audio & Digital Musical Instrument Division, Yamaha Corporation
© 2009 Yamaha Corporation

WT82140 912POXXX.X-01A0
Printed in China