

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

- Use only the included power cable. Failure to do so could result in fire, electric shock, or damage to the product.
- Do not use the included power cable with other electrical equipment. Doing so could result in fire, electric shock, or damage to the product.
- Use only the specified power supply voltage. Failure to do so could result in fire, electric shock, or damage to the product.
- Connect the power plug to an outlet that you can see and reach. Ensure that you can easily remove the power plug if necessary.
- Fully and securely insert the power plug into the outlet. If the plug is not fully inserted, it could result in an electric shock. It could also lead to dust accumulating on the plug, which could then result in heat or fire.
- Verify the current capacity of the outlet or the power strip, and ensure that use of the product does not exceed the capacity. Any overheating or degradation of the power strip could result in fire.
- Immediately remove the power plug from the outlet in any of the following cases. Failure to do so may result in fire or an electric shock. Request that your dealer carry out any necessary repairs or inspections.
 - Any abnormal odor or noise occurs;
 - Smoke is emitted;
 - The product is broken; or
 - The product has been exposed to water.
- Do not damage the power cable. Damaging the power cable could result in fire, electric shock, or damage to the product.
 - Do not place any heavy objects on the cable.
 - Do not modify the cable in any way.
 - Do not use any staples to affix the cable in place.
 - Do not apply excessive force to the cable.
 - Keep the cable away from anything hot.
- Do not touch the terminals with your fingers or metal objects. Doing so may result in electric shock or damage to the product.
- Do not drop the product or apply a strong impact to the product. The internal parts could break, which could then result in electric shock, fire, or damage to the product.
- If the product has been damaged, request repair or inspection services from a dealer. Continued use of the product may result in fire or electric shock.
- Do not disassemble or alter this product in any way. Doing so could result in fire, electric shock, or damage to the product.
- Do not obstruct heat dissipation.
 - Do not place a cloth, tablecloth or other such object over the product.
 - Do not place the product on top of a rug, carpet, etc.
 - Do not wedge or squeeze the product into a narrow space that has poor air circulation.
 - Do not block the ventilation holes.

Make sure that there is adequate space around this product.

Failure to observe the above may result in heat being trapped inside the product, causing a fire or damage to the product.

- Do not place the product outdoors or in a location where water may drip on it. Doing so may result in fire, electric shock or damage to the product.
- Do not install the product anywhere it will be exposed to dust or humidity, oily smoke or steam, or corrosive gas. Doing so could result in fire, electric shock, or damage to the product.
- Ensure that the product is level. Do not place it upside down or in a vertical orientation. Doing so may result in fire, electric shock or damage to the product.
- Do not install the product in locations where a foreign object may fall onto the product or the product may be exposed to liquid dripping or splashing. Do not place the following items on the product:
 - Other components, as they may cause damage and/or discoloration on the surface of the product.
 - Burning objects (i.e. candles), as they may cause fire, damage to the product, and/or personal injury.
 - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to the product.
- Do not insert foreign objects such as metal or paper in the product. Doing so may result in fire, electric shock, or damage to the product.
- If you hear thunder, do not touch the product. Doing so may result in electric shock.
- Periodically clean any dirt and dust from the power plug. Failure to do so could result in fire.
- The product should be used at least 22 cm away from persons using a pacemaker, defibrillator, or similar device. The product may affect the pacemaker, resulting in a serious accident.
- Do not use this product near medical equipment. Radio waves from this product may adversely affect the operation of electro-medical equipment. Do not use this product in locations where the use of radio waves is restricted, such as near medical equipment.

CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the device or other property. These precautions include, but are not limited to, the following:

- Be sure to use the USB and microphone cables that come with the product. Using other USB or microphone cables may result in fire, electric shock, or damage to the product.
- When this product is not used for a long period of time, be sure to unplug all power plugs. Failure to do so may result in fire or electric shock.
- Avoid damaging the USB and microphone cables.
 - Do not place heavy objects on cables.
 - Do not modify cables.
 - Do not affix cables using staples.
 - Do not apply unnecessary force to cables.
 - Do not place cables near heat sources.
 Doing so may result in fire, electric shock, or damage to the product.
- Ensure your hands are dry when connecting or disconnecting the power plug or cables. Touching the plug or cable with wet hands may result in electric shock or damage to the product.
- Do not install the product anywhere unstable or where it will be exposed to vibrations. It could fall over or turn upside down, thus resulting in injury or damage to the product.
- Do not install the product anywhere it will be exposed to direct sunlight or extremely high temperatures (near a heater, etc.). Doing so could result in damage to the product.
- Do not sit/stand on the product or place other objects on top of it. Doing so may result in damage to the product.
- Turn the volume down to the minimum level before starting playback. Failure to do so will cause loud noises to be emitted and may result in hearing impairment.
- Do not use the product anywhere it will be exposed to rapid changes in the ambient temperature. Any rapid change in the ambient temperature could cause condensation on the product, which could then result in damage to the product. If any condensation occurs, turn the power off and then leave the product for a while until it has dried off.
- Do not connect any cables while the power is turned on. Doing so could result in damage to the product and any connected equipment.
- Earth any static electricity from your body or clothing before touching the product. Failure to do so could result in damage to the product.

- Route and connect the cables correctly. If the cables are pulled or become caught on someone's leg, the product or connected equipment could tip over or fall, thus resulting in injury or damage to the product.
- Before connecting external equipment, thoroughly read the instruction manuals provided with the equipment and make connections according to the instructions.

This unit is not disconnected from the AC power source as long as it is connected to the AC wall outlet, even if this unit itself is turned off. This state is called the standby mode. In this state, this unit is designed to consume a very small quantity of power.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the unit, or data that is lost or destroyed.

Information for users on collection and disposal of old equipment and used batteries:



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation.



By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

For business users in the European Union:



If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union:



These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the EU Battery Directive for the chemical involved.

Cd

(weee_battery_eu_en_02)



Manual Development Department
 © 2016 Yamaha Corporation
 Published 04/2016 AB-A0